
Lecture 3(Part1)

Topics covered:
CPU Architecture



Fetch/execute cycle of an instruction

❑ Step I:

- ◆ Fetch the contents of the memory location pointed to by Program Counter (PC).
- ◆ PC points to the memory location which has the instruction to be executed.
- ◆ Load the contents of the memory location into Instruction Register (IR).

❑ Step II:

- ◆ Increment the contents of the PC by 4 (assuming the memory is byte addressable and the word length is 32 bits).

❑ Step III:

- ◆ Carry out the operation specified by the instructions in the IR.

❑ Steps I and II constitute the fetch phase, and are repeated as many times as necessary to fetch the complete instruction.


❑ Step III constitutes the execution phase.



Internal organization of a processor

- ❑ Recall that a processor has several registers/building blocks:
 - ◆ Memory address register (MAR)
 - ◆ Memory data register (MDR)
 - ◆ Program Counter (PC)
 - ◆ Instruction Register (IR)
 - ◆ General purpose registers $R0 - R(n-1)$
 - ◆ Arithmetic and logic unit (ALU)
 - ◆ Control unit.
- ❑ How are these units organized and how do they communicate with each other?

Internal organization of a processor

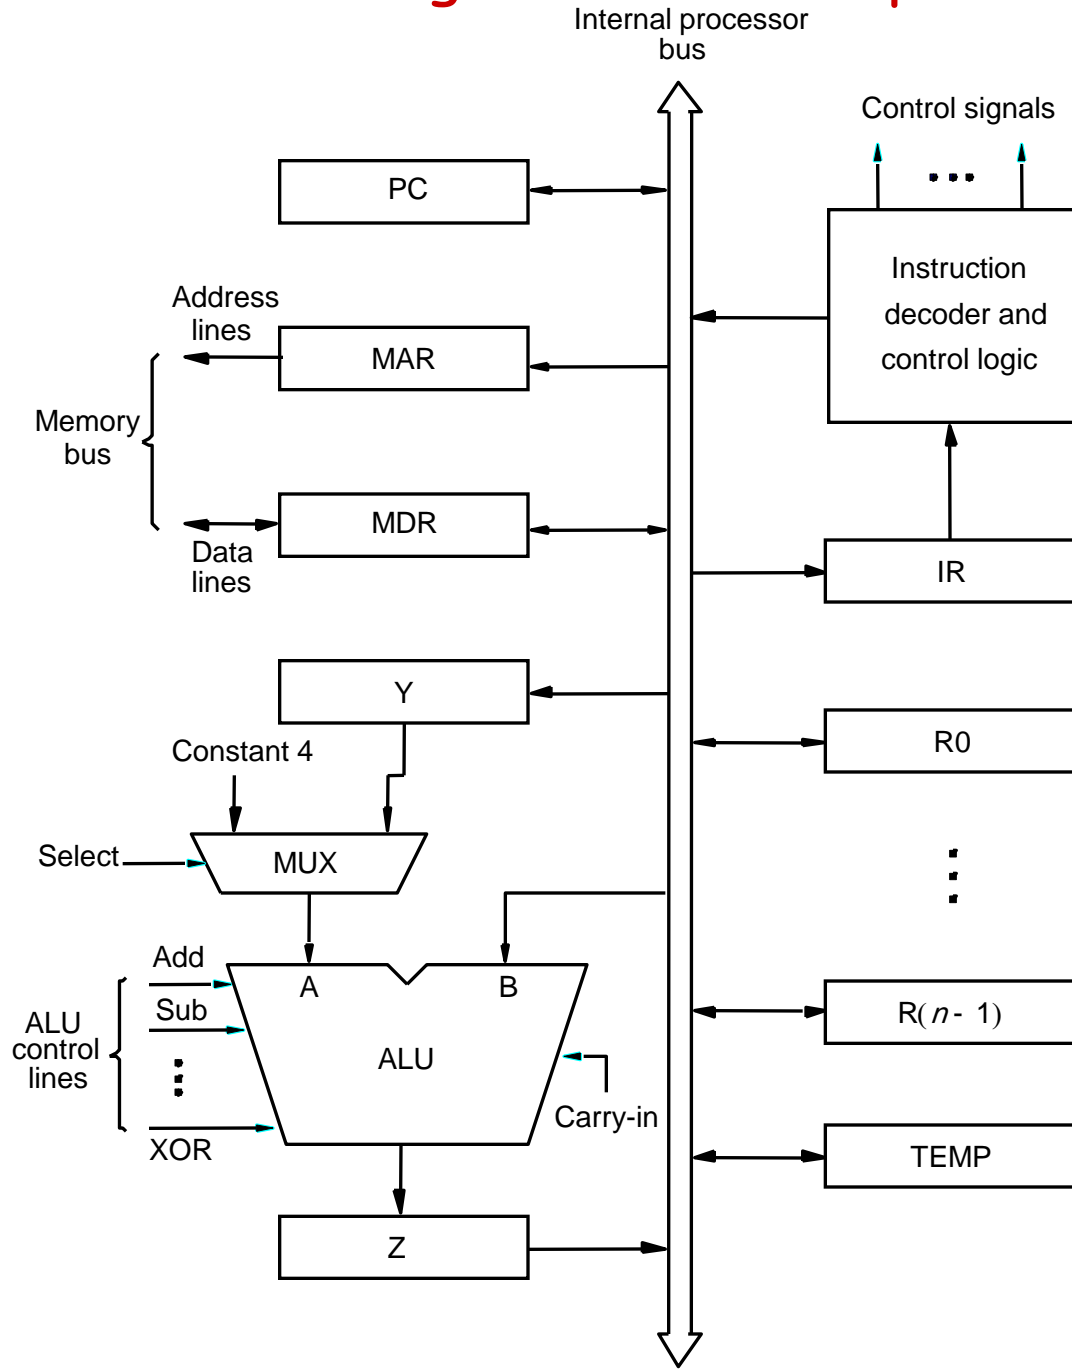



Single bus organization

❑ Single bus organization:

- ◆ ALU, control unit and all the registers are connected via a single common bus.
- ◆ Bus is internal to the processor and should not be confused with the external bus that connects the processor to the memory and I/O devices.

❑ Data lines of the external memory bus are connected to the internal processor bus via MDR.

- ◆ Register MDR has two inputs and two outputs.
- ◆ Data may be loaded to (from) MDR from (to) internal processor bus or external memory bus.

❑ Address lines of the external memory bus are connected to the internal processor bus via MAR.

- ◆ MAR receives input from the internal processor bus.
- ◆ MAR provides output to external memory bus.



Single bus organization (contd..)

- ❑ Instruction decoder and control logic block, or **control unit** issues signals to **control** the operation of all units inside the processor and for interacting with the memory bus.
 - ◆ **Control signals** depend on the **instruction** loaded in the Instruction Register (**IR**)
- ❑ **Outputs** from the **control logic** block are connected to:
 - ◆ **Control lines** of the **memory bus**.
 - ◆ **ALU**, to determine which operation is to be performed.
 - ◆ **Select** input of the multiplexer **MUX** to select between Register Y and constant 4.
 - ◆ **Control lines** of the **registers**, to **select** the registers.



Single bus organization (contd..)


□ Registers **Y**, **Z**, and **TEMP**:

- ◆ Used by the processor for temporary storage during execution of some instructions.
- ◆ Note that Registers **R0** to **R(n-1)** are used to store data generated by one instruction for later use by another instruction.
- ◆ Data is stored in **R0** through **R(n-1)** after the execution of an instruction.

□ Multiplexer **MUX** selects either the output of register **Y** or a constant **4**, depending upon the control input **Select**.

- ◆ Constant **4** is used to increment the value of the **PC**.

♦ Registers and the bus

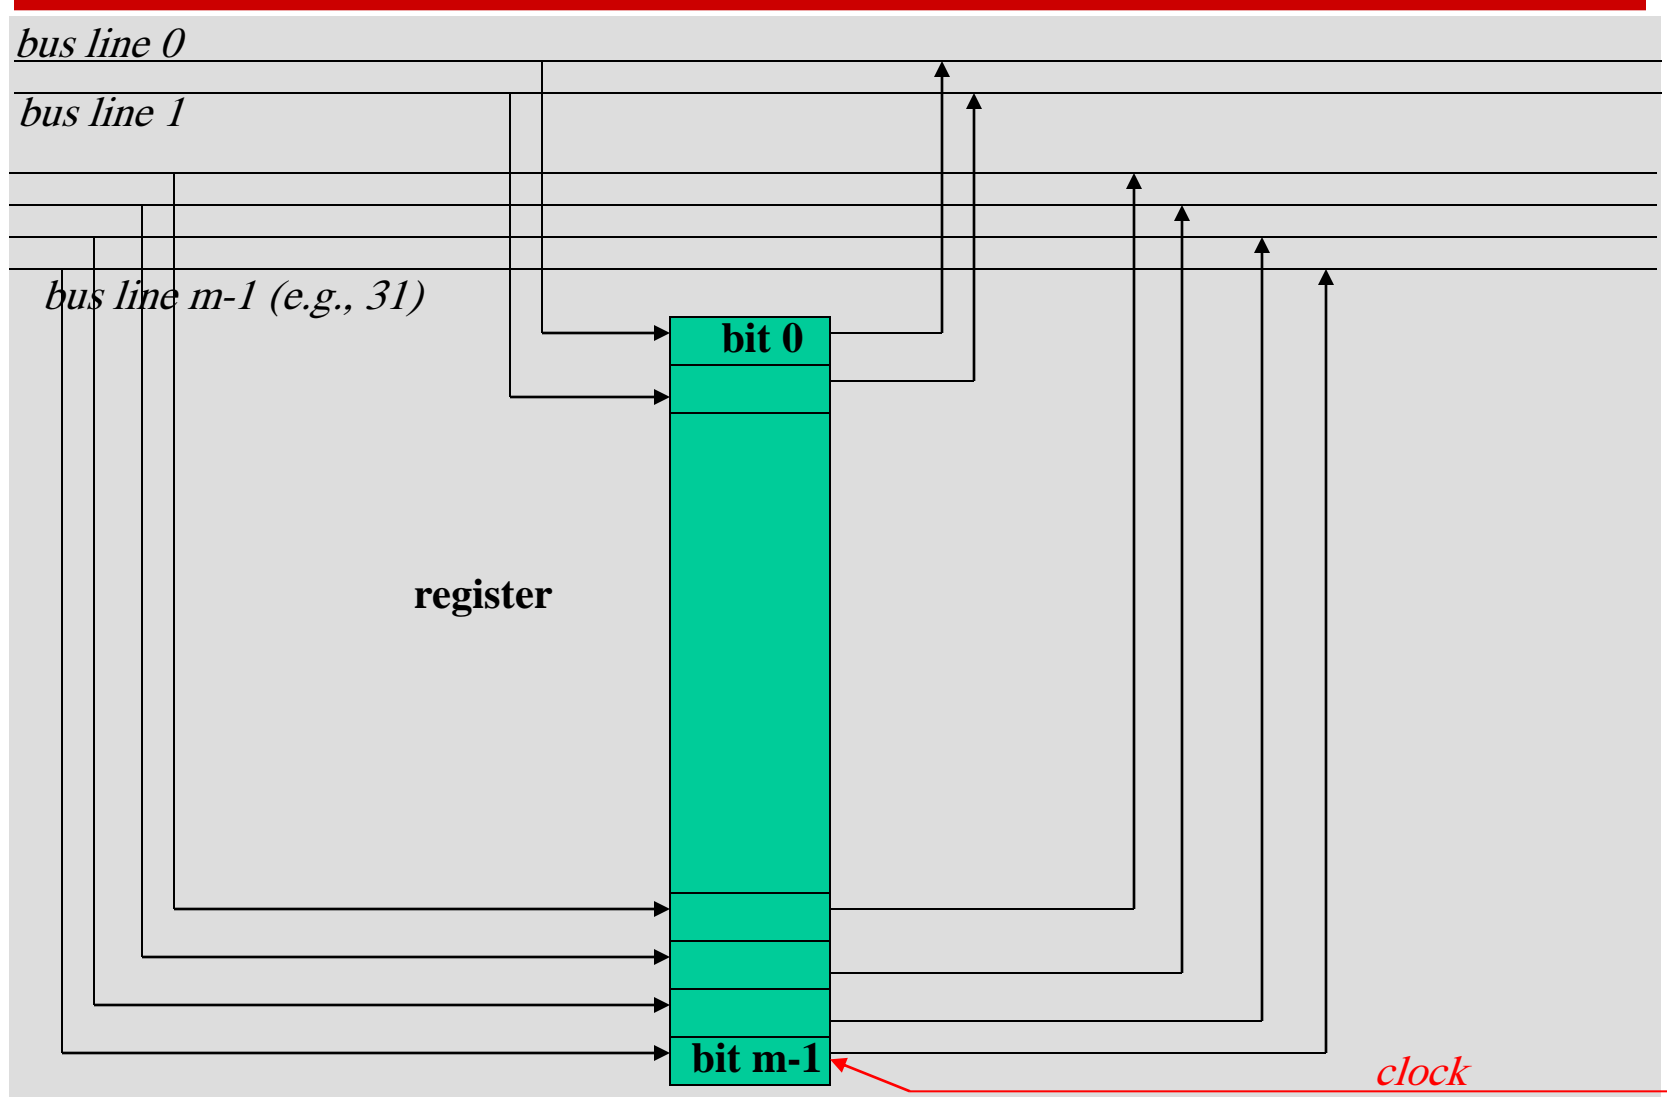




Registers and the bus (contd..)

- ❑ A **bus** may be viewed as a collection of parallel wires.
- ❑ Buses **have no memory**:
 - ◆ They are just a collection of wires.
- ❑ When **data is on the bus**, all **registers** can “**see**” that data at their inputs.
- ❑ A **register** may place its contents onto the bus.



Registers and the bus (contd..)

- ❑ At any **one time**, **only one** register may **output** its contents to the **bus**:
 - ◆ Which **register** **outputs** its **content** to the **bus** is **determined** by the **control signal** issued by the **control logic**.
 - ◆ **Control** signal **depends** on the **instruction** loaded in the instruction register **IR**.
- ❑ **Registers** can **load data** from the **bus**:
 - ◆ Which **registers** **load data** from the **bus** is **determined** by the **control signal** issued by the **control logic**.
- ❑ **Registers** are **clocked** (sequential) entities (unlike **ALU** which is purely **combinatorial**).

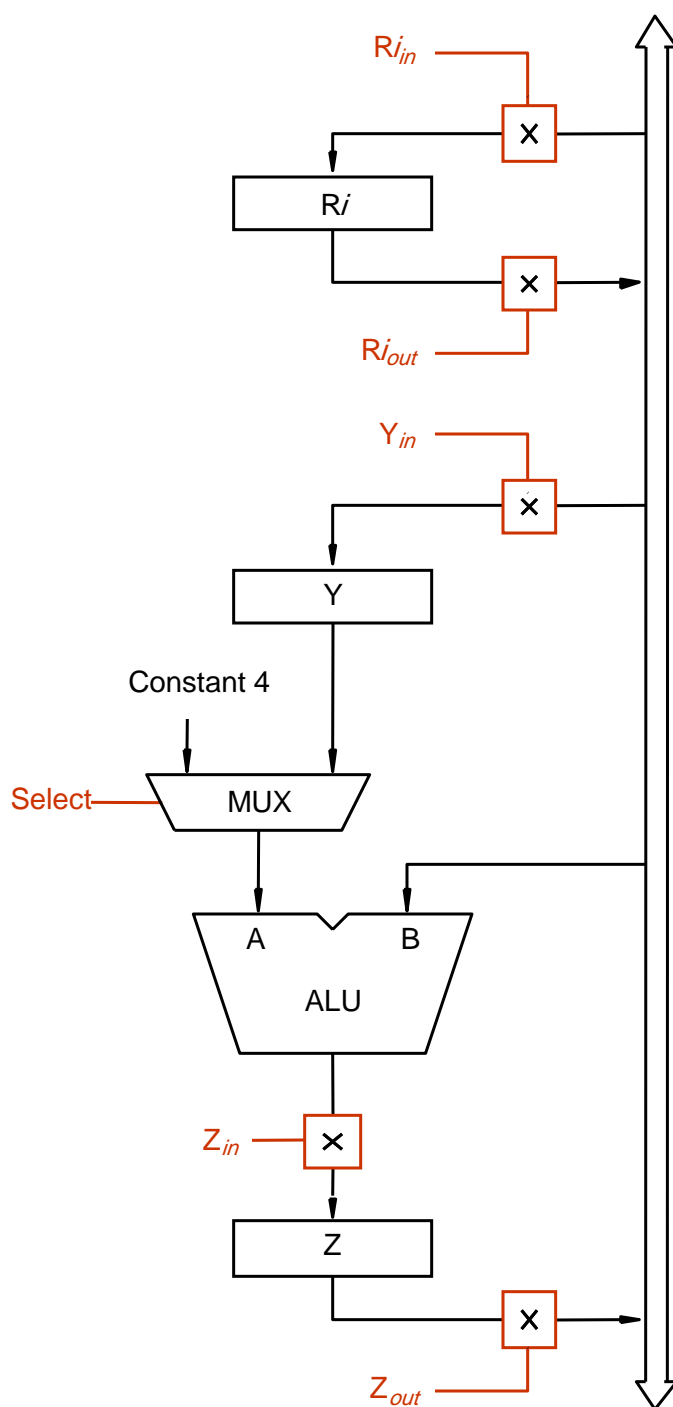

Registers are connected to the bus via switches controlled by the signals R_{in} & R_{out} .


Each register R_i has two control signals, $R_{i_{in}}$ and $R_{i_{out}}$.

If $R_{i_{in}}=1$, the data from the bus is loaded into the register.

If $R_{i_{out}}=1$, the data from the register is loaded onto the bus.


The same holds for registers Y and Z as well.

◆ Registers and the bus (contd..)

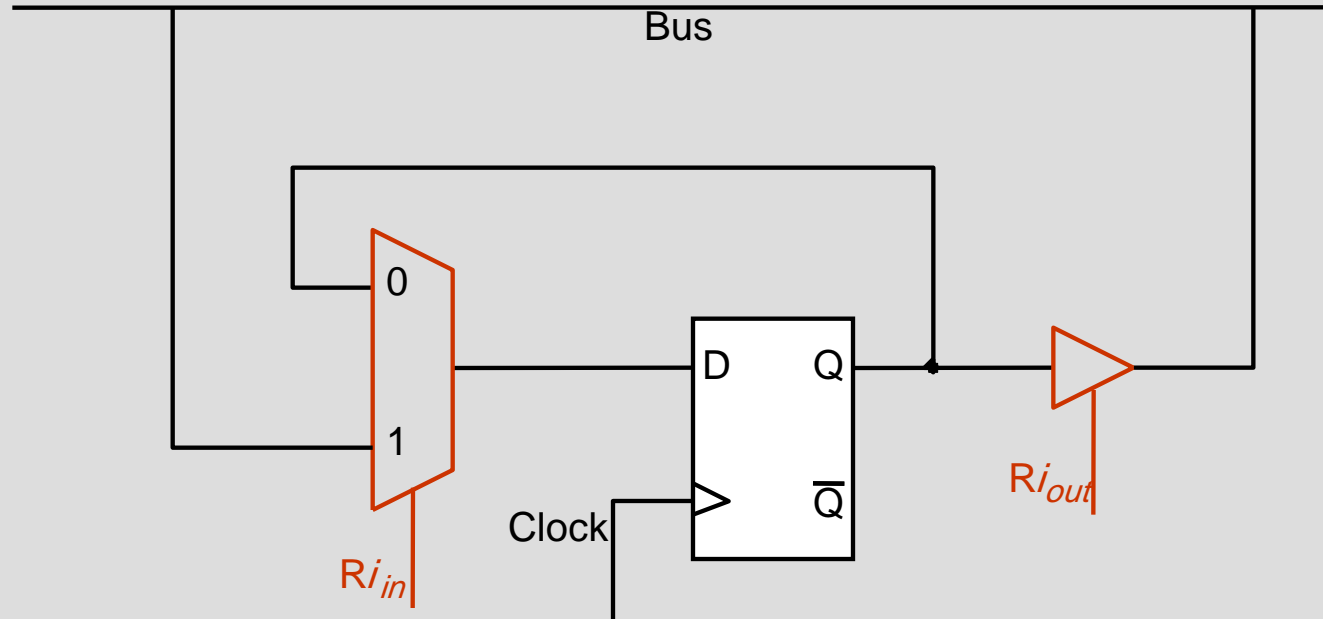

- Each *bit* in a *register* may be *implemented* by an *edge-triggered D flip flop*.
- *Two input multiplexer* is used to *select* the *data* applied to the *input* of an *edge triggered flip-flop*.
- *Q output* of the *flip-flop* is *connected* to the *bus* via a *tri-state gate*.

◆ Registers and the bus (contd..)

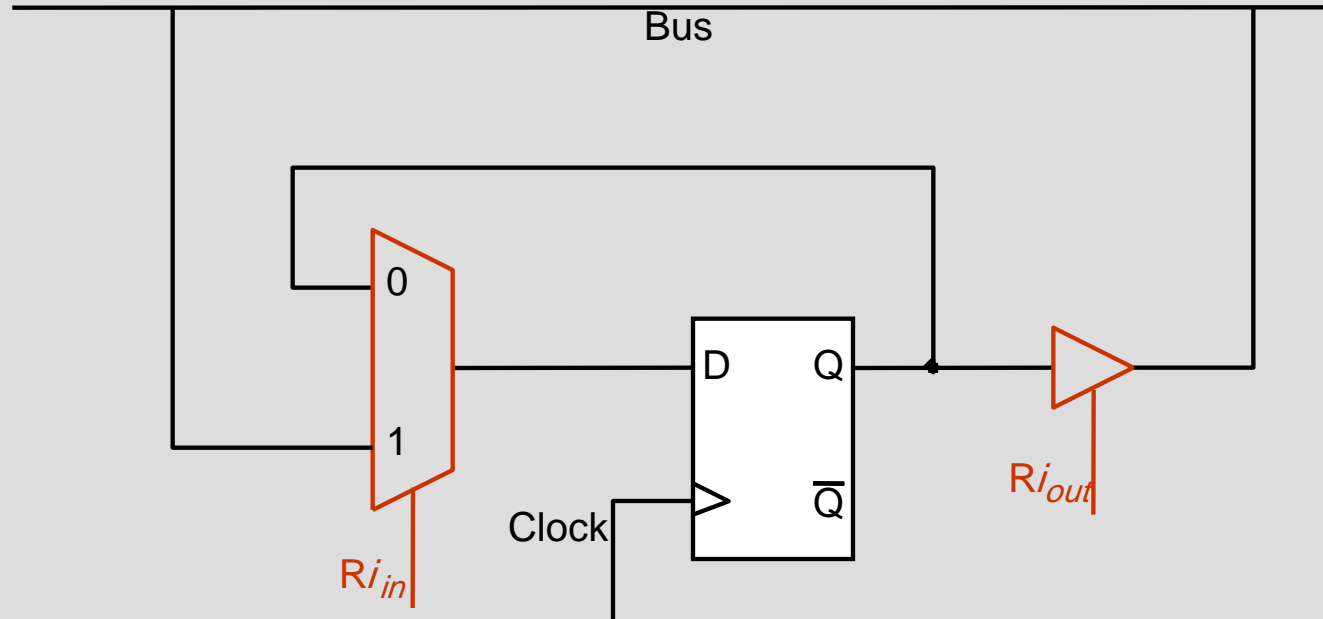

$Ri_{in} = 1$:

Multiplexer selects the data on the bus.


Data is loaded into the flip-flop at the rising edge of the clock.

$Ri_{in} = 0$:

Multiplexer feeds back the value currently stored in the flip-flop.

Q output represents the value currently stored in the flip-flop.

◆ Registers and the bus (contd..)

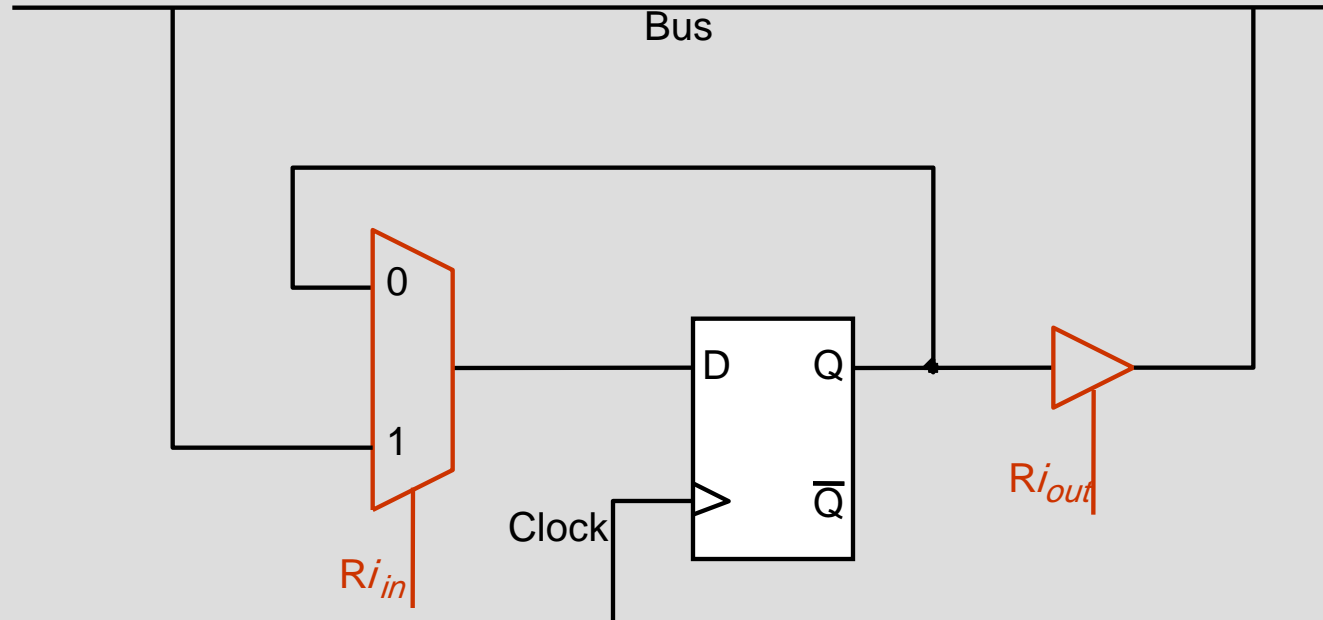

$Ri_{out} = 1$:

Tri-state gate loads the value of the flip-flop onto the bus.

Data is loaded onto the bus at the rising edge of the clock.

$Ri_{out} = 0$:

Gate's output is in high-impedance (electrically disconnected) state.


Corresponds to open-circuit state.

♦ Registers and the bus (contd..)


Operation of a tri-state gate

- A *tri-state gate* can enter *one of three output states*.
 - its *output* can be in a logic *low* state (*L*).
 - its *output* can be in a logic *high* state (*H*).
 - its *output* can be effectively an *open-circuit* (*high impedance*)
- When a tri-state gate is connected to a bus in *high-impedance state*, its *outputs* are effectively *disconnected* from the *bus*.

$Ri_{out} = 1$, output is:
Logic **low**, if $Q = 0$
Logic **high**, if $Q = 1$

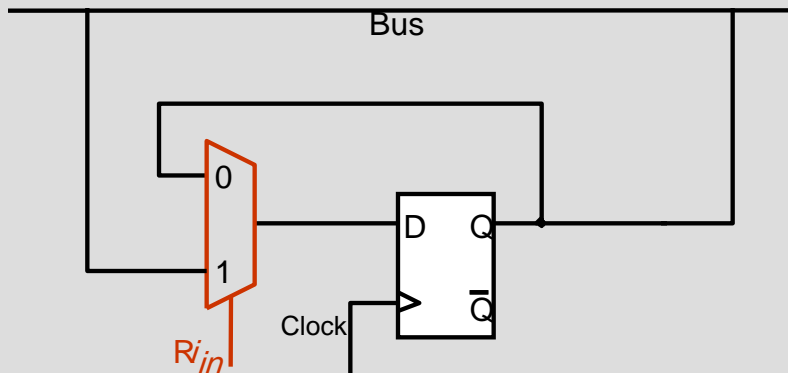


$Ri_{out} = 0$:
High impedance
Open circuit condition

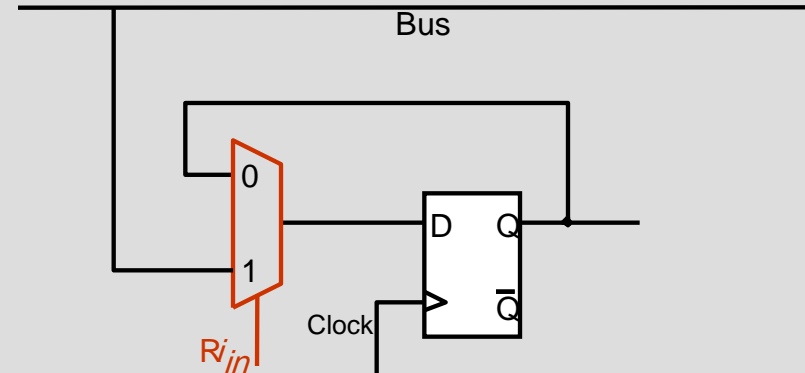



Registers and the bus (contd..)

Operation of an edge-triggered flip-flop

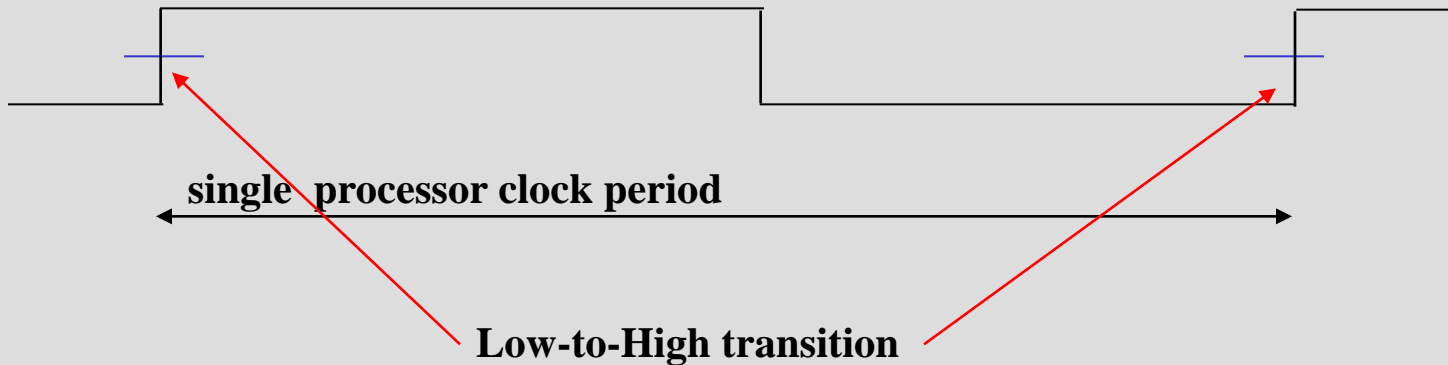

- *Data is loaded from the register to the bus (or to the register from the bus) at the rising edge of the clock.*
- *Data is loaded at the L-H transition of the clock.*




Registers and the bus (contd..)

- ❑ Data transfers and operations take place within **time periods** defined by the processor **clock**.
 - ◆ Time period is known as the **clock cycle**.
- ❑ At the **beginning** of the **clock cycle**, the **control signals** that govern a particular transfer are **asserted**.
 - ◆ For e.g., if the data are to be transferred from register $R0$ to the bus, then $R0_{out}$ is set to **1**.
- ❑ Edge-triggered flip-flop operation explained earlier used **only the rising edge of the clock** for data transfer.
 - ◆ Other schemes are possible, for example, data transfers may use rising and **falling edges** of the **clock**.
- ❑ When **edge-triggered** flip-flops are **not used**, **two or more clock signals** may be needed to guarantee proper transfer of data. This is known as **multiphase clocking**.



Simple register transfer example

Transfer the contents of register R3 to register R4

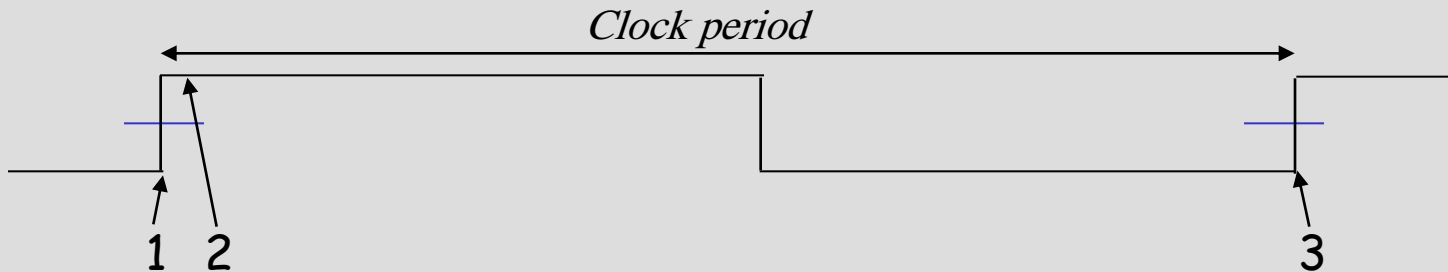


1. Control signals $R3_{out}$ and $R4_{in}$ become 1. They stay valid *until the end of the clock cycle*.
2. After a small delay, the *contents* of $R3$ are *placed* onto the *bus*. The contents of $R3$ stay onto the bus *until the end of the clock cycle*.
3. At the *end of the clock cycle*, the *data* onto the bus is *loaded* into $R4$. $R3_{out}$ and $R4_{in}$ become 0.



Loading multiple registers from the bus

Transfer the contents of register R3 to register R4, R5

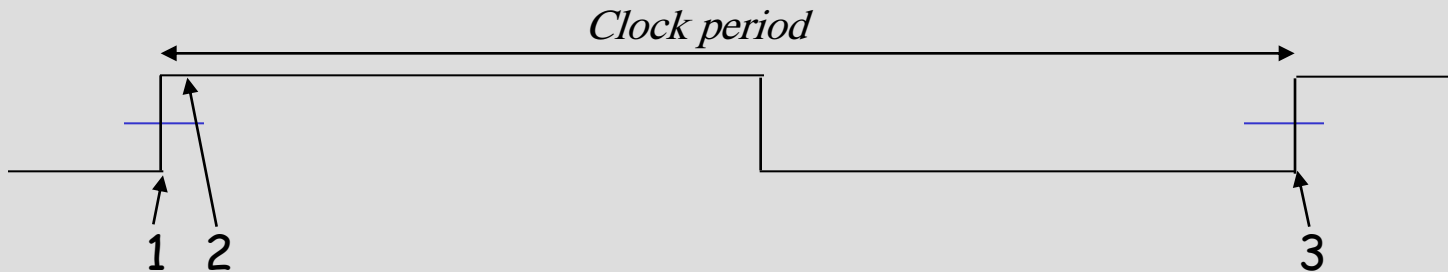

1. Control signals $R3_{out}$, $R4_{in}$ and $R5_{in}$ become 1. They stay valid until the end of the clock cycle.
2. After a small delay, the contents of $R3$ are placed onto the bus. The contents of $R3$ stay onto the bus until the end of the clock cycle.
3. At the end of the clock cycle, the data onto the bus is loaded into $R4$ and $R5$. $R3_{out}$, $R4_{in}$ and $R5_{in}$ become 0.



Loading multiple registers from the bus (contd..)

- ❑ It is possible to load multiple registers simultaneously from the bus.
 - ◆ For e.g., transfer the contents of register R3 to registers R4 and R7 simultaneously.
- ❑ The number of registers that can be simultaneously loaded depends on:
 - ◆ Drive capability (fan-out)
 - ◆ Noise.
 - ◆ Note that this is an electrical issue, not a logical issue.
- ❑ Distinguish this from multiple registers loading the bus:
 - ◆ For e.g. load the contents of registers R3 and R4 onto the bus simultaneously.
 - ◆ Logically inconsistent event.
 - ◆ Physically dangerous event.



Arithmetic Logic Unit (ALU)

- ❑ ALU is a purely combinatorial device:
 - ◆ It has no memory or internal storage.
- ❑ It has 2 input vectors:
 - ◆ These may be called the A- and B-vector or the R- and S-vector
 - ◆ The inputs are as wide as the registers/system bus (e.g., 16, 32 bits)
- ❑ It has 1 output vector
 - ◆ Usually denoted F



Arithmetic Logic Unit (ALU) (contd..)


Sample functions performed by the ALU

- $F = A+B$ $F = A+B+1$
- $F = A-B$ $F = A-B-1$
- $F = A \text{ and } B$ $F = A \text{ or } B$
- $F = \text{not } A$ $F = \text{not } B$
- $F = \text{not } A + 1$ $F = \text{not } B + 1$
- $F = (\text{not } A) \text{ and } B$ $F = A \text{ and } (\text{not } B)$
- $F = A \text{ xor } B$ $F = \text{not } (A \text{ xor } B)$
- $F = A$ $F = B$



Arithmetic Logic Unit (ALU) (contd..)


ALU is basically a black-box

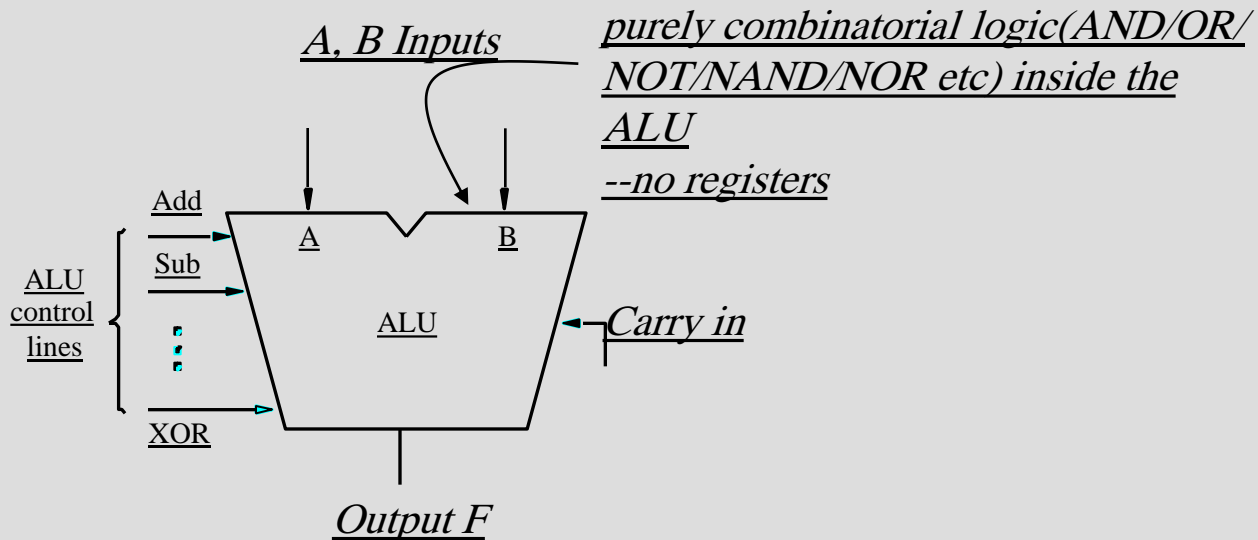



Arithmetic and Logic Unit (ALU) (contd..)

ALU connections to the bus

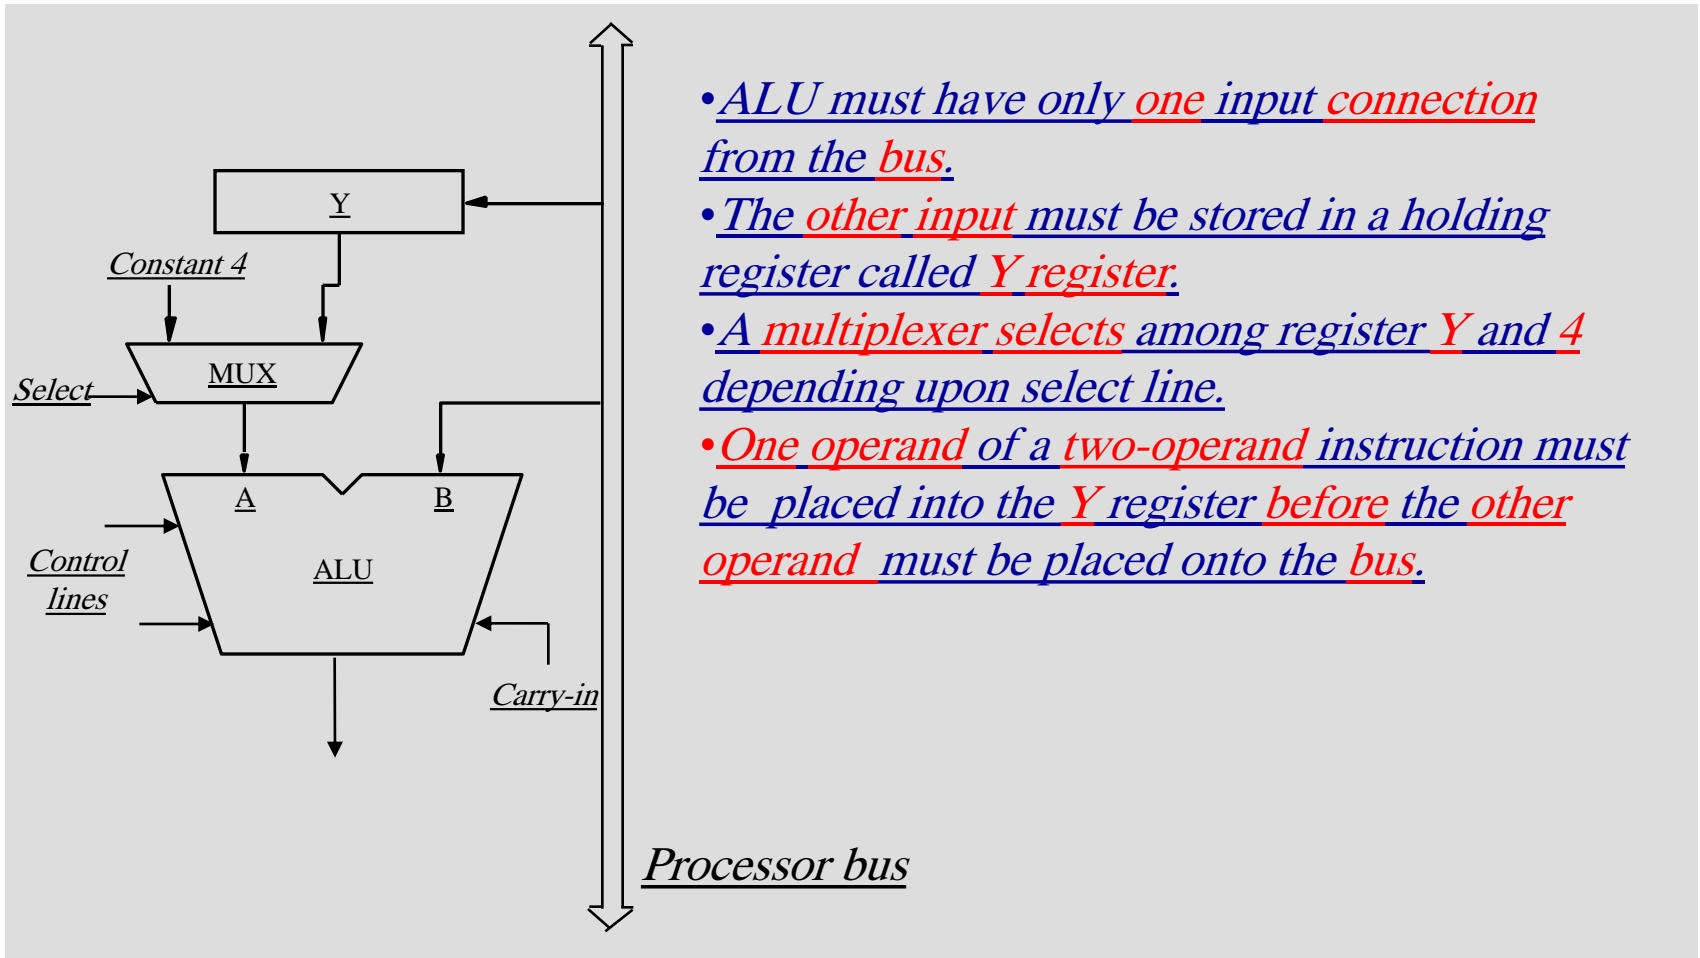


- ALU must have only **one** input connection from the **bus**.
- The **other** input must be stored in a holding register called **Y** register.
- A **multiplexer** selects among register **Y** and **4** depending upon select line.
- One operand of a two-operand instruction must be placed into the **Y** register before the other operand must be placed onto the **bus**.



Arithmetic and Logic Unit (ALU) (contd..)

ALU connections to the bus

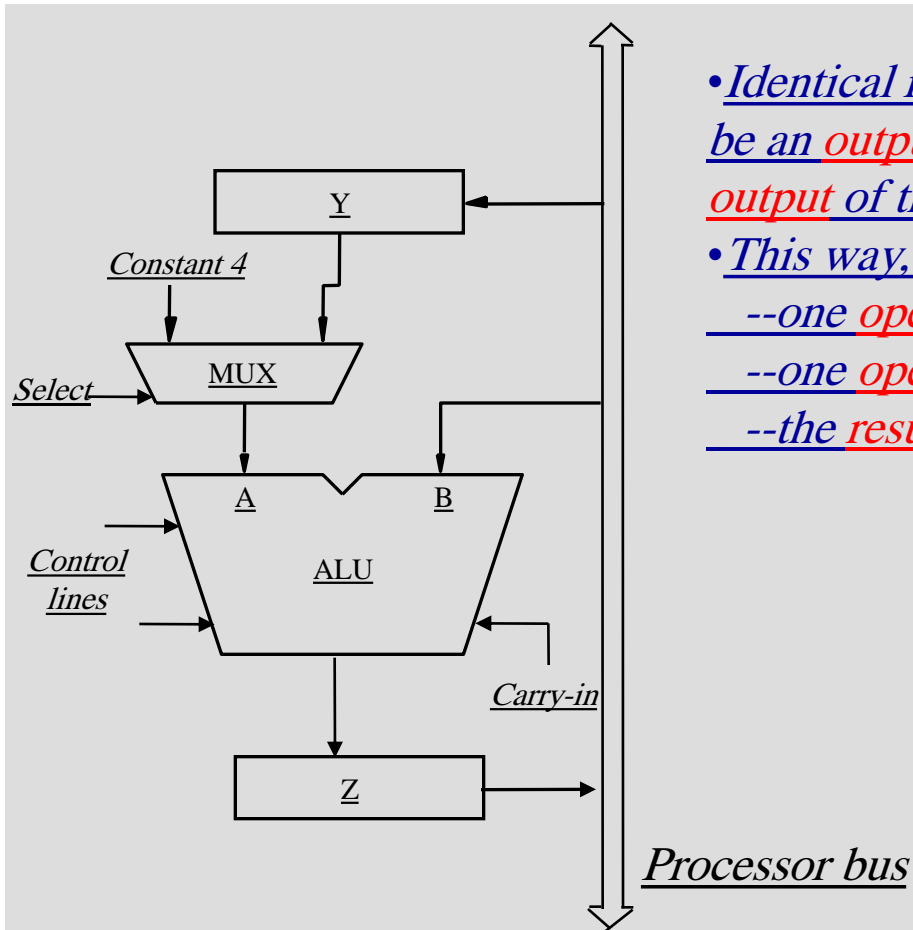

- Identical reasoning tells us that there must be an output register Z which collects the output of the ALU at the end of each cycle.
- This way, there can be
 - one operand in the Y register
 - one operand ON THE BUS
 - the result stored in the Z register



Performing an arithmetic operation

Add the contents of registers $R1$ and $R2$ and place the result in $R3$.

That is: $R3 = R1 + R2$

1. Place the contents of register $R1$ into the Y register in the *first clock cycle*.


2. Place the contents of register $R2$ onto the *bus* in the *second clock cycle*.

Both inputs to the ALU are now valid. *Select* register Y , and assert the ALU command $F=A+B$.

3. In the *third clock cycle*, Z register has latched the *output* of the *ALU*. Thus the contents of the Z register can be *copied* into register $R3$.




Performing an arithmetic operation (contd..)

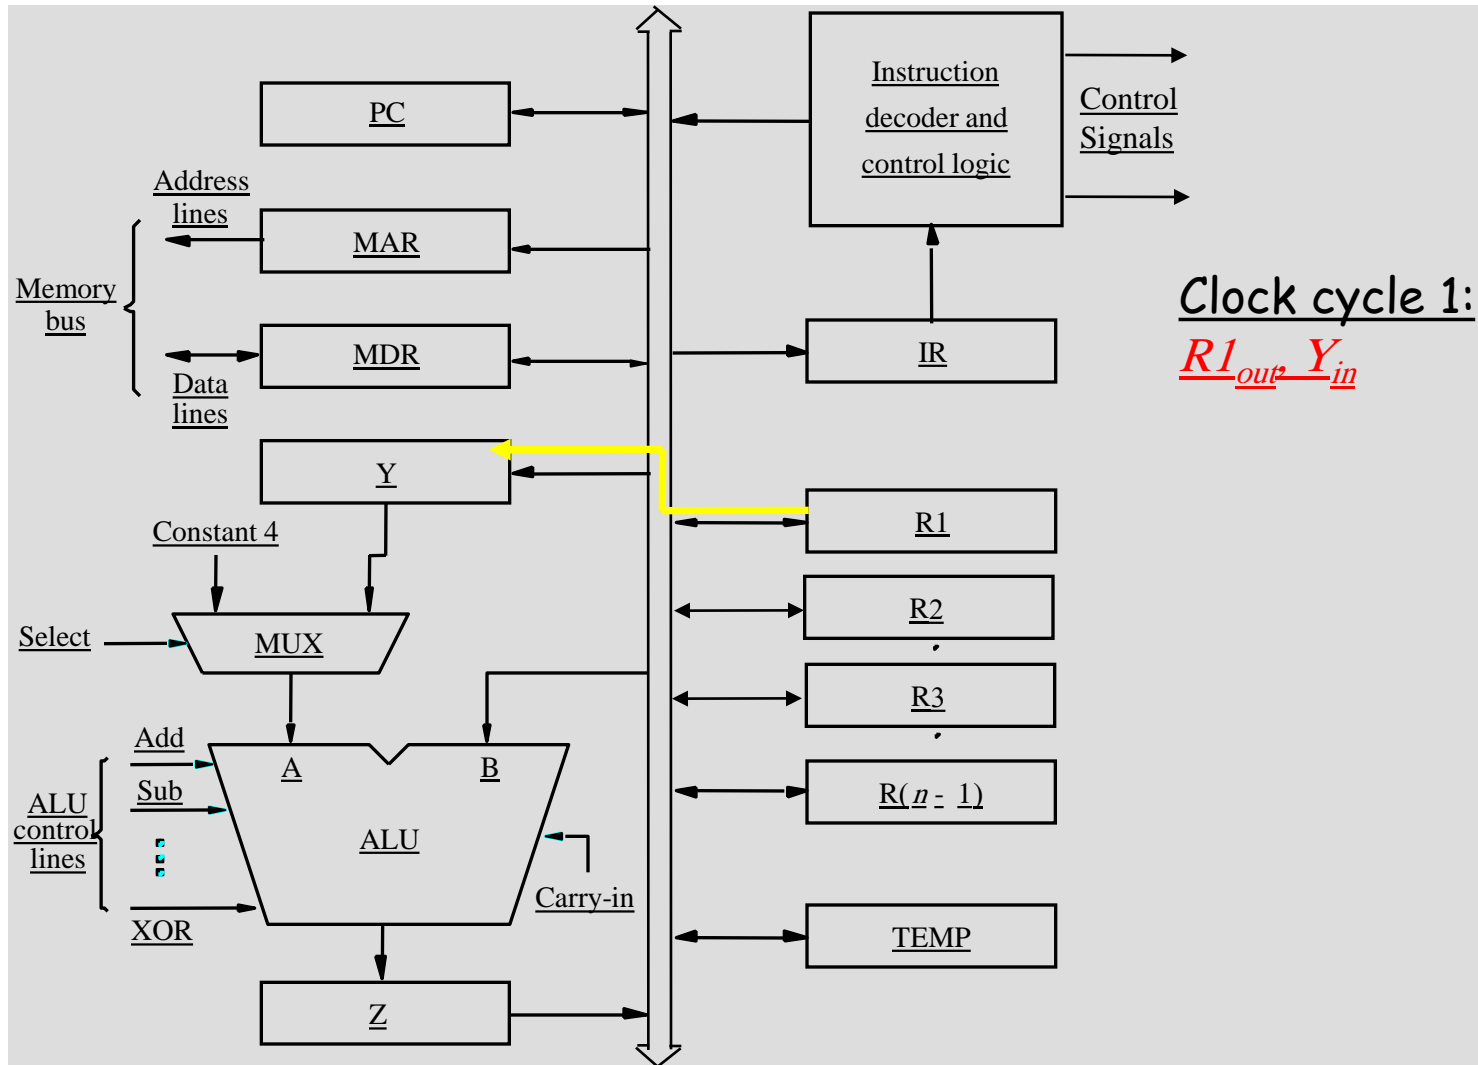




Performing an arithmetic operation (contd..)

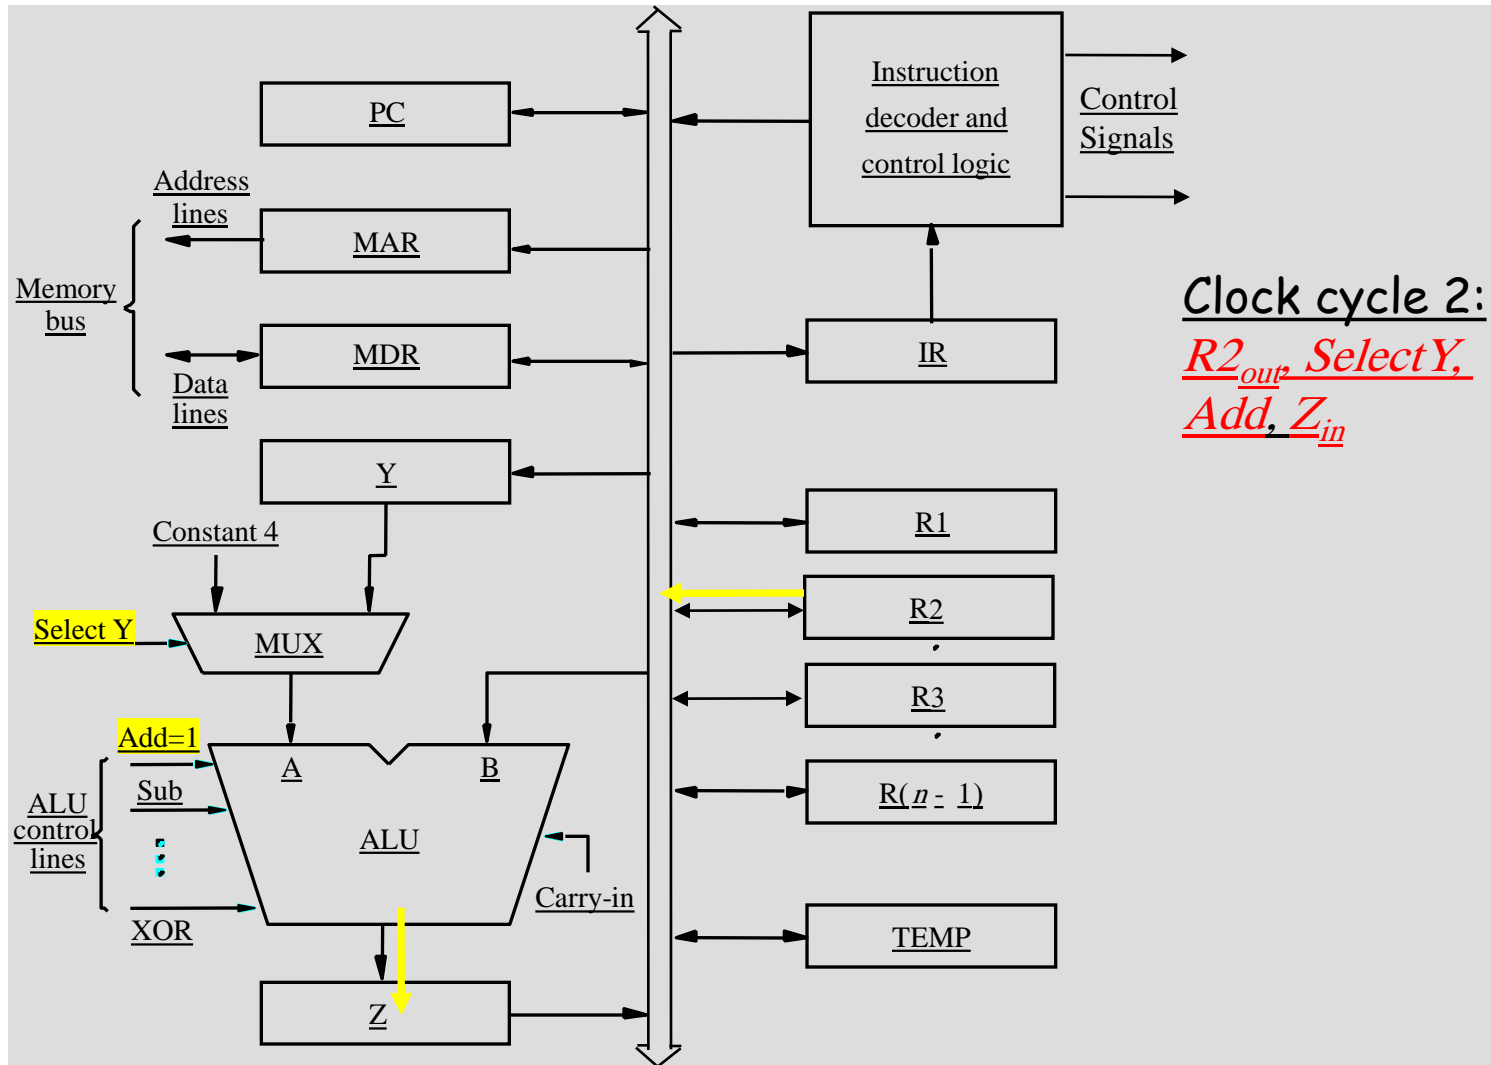



Performing an arithmetic operation (contd..)

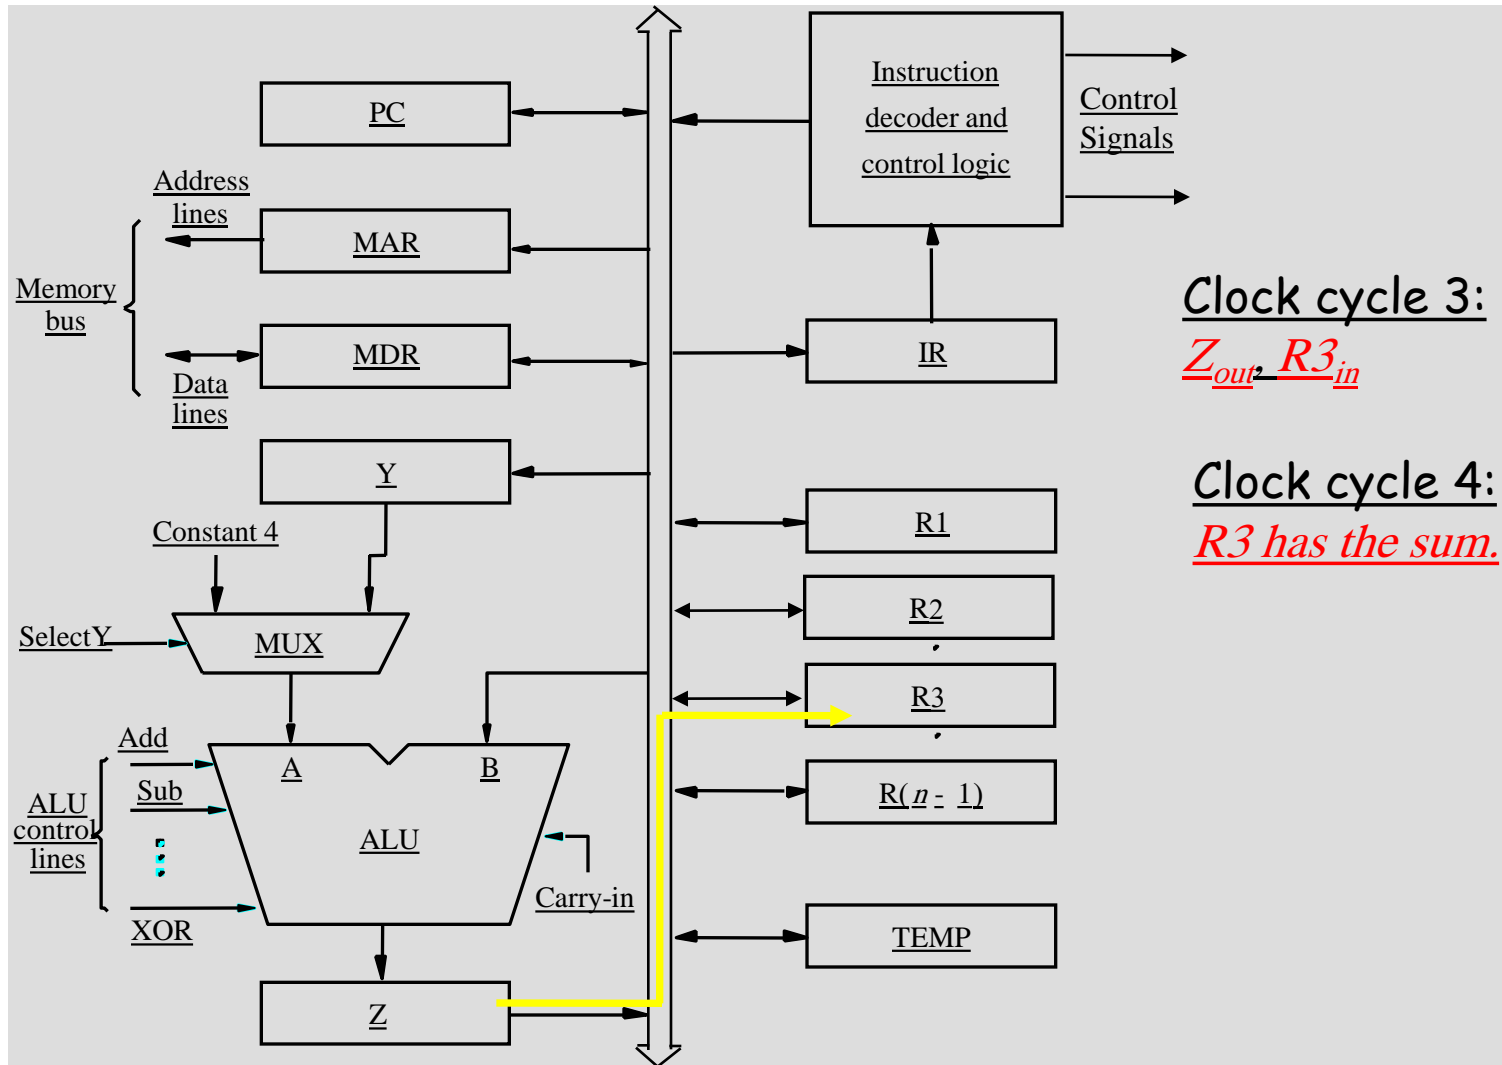



Performing an arithmetic operation (contd..)

Clock Cycle 1:

$R1_{out}$ Y_{in} $(Y=R1)$

Clock Cycle 2:

$R2_{out}$ Select Y, Add, Z_{in} $(Z = R1+R2)$

Clock Cycle 3:

Z_{out} $R3_{in}$ $(R3=Z)$



Performing an arithmetic operation (contd..)

□ Inputs of the ALU:

- ◆ Input B is tied to the bus.
- ◆ Input A is tied to the output of the multiplexer.

□ Output of the ALU:

- ◆ Tied to the input of the Z register.

□ Z register:

- ◆ Input tied to the output of the ALU.
- ◆ Output tied to the bus.
- ◆ Unlike Ri_{in} , Z_{in} loads data from the output of the ALU and not the bus.



Performing an arithmetic operation (contd..)

Events as seen by the system registers, bus, ALU over time.

<u>cycle:</u>	<u>controls active</u>	<u>what the bus sees</u>	<u>what Y has</u>	<u>output of ALU</u>
<u>start of</u>				
1	$R1_{out}, Y_{in}$	contents of R1	--unknown	--unknown
<u>end of</u>				
1	$R1_{out}, Y_{in}$	contents of R1	R1	--unknown
≡				
<u>start of</u>				
2	$R2_{out}, F=A+B$	contents of R2	R1	$F=A+B=R1+R2$
				but this is not valid yet
<u>end of</u>				
2	$R2_{out}, F=A+B, Z_{in}$	contents of R2	R1	$F=A+B=R1+R2$ (now valid)
≡				
<u>start of</u>				
3	$Z_{out}, R3_{in}$	contents of Z	R1	--unknown
<u>end of</u>				
3	$Z_{out}, R3_{in}$	contents of Z	R1	--unknown (but R3 latches bus contents)



ALU operations

□ $RC = RA \text{ op } RB$

□ Clock cycle 1:

◆ Move RA to Y register.

◆ $RA_{out} \rightarrow Y_{in}$

□ Clock cycle 2:

◆ Put RB on the bus, perform $F = RA \text{ op } RB$, and transfer the result to Z .

◆ $RB_{out} (RA \text{ op } RB) = 1$, Select Y , Z_{in}

□ Clock cycle 3:

◆ Put Z on the bus, and load Z into RC .

◆ $Z_{out} \rightarrow RC_{in}$




Fetching a word from memory

- ❑ Processor has to specify the address of the memory location where this information is stored and request a Read operation.
- ❑ Processor transfers the required address to *MAR*.
 - ◆ Output of *MAR* is connected to the address lines of the memory bus.
- ❑ Processor uses the control lines of the memory bus to indicate that a *Read* operation is needed.
- ❑ Requested information are received from the memory and are stored in *MDR*.
 - ◆ Transferred from *MDR* to other registers.



Fetching a word from memory (contd..)

Connections for register MDR

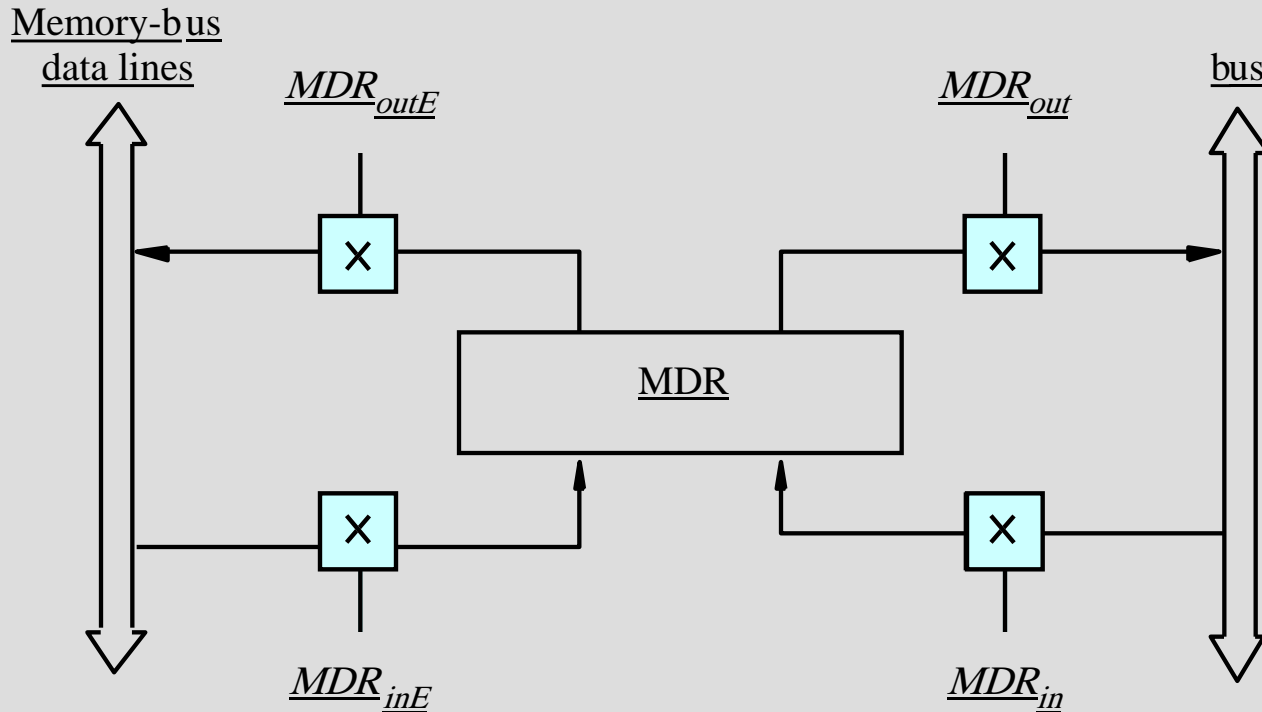

\underline{MDR}_{outE} and \underline{MDR}_{inE} control
connection to external bus.

\underline{MDR}_{out} and \underline{MDR}_{in} control
connection to internal bus.



Fetching a word from memory (contd..)

- ❑ Timing of the internal processor operations must be coordinated with the response time of memory Read operations.
- ❑ Processor completes one internal data transfer in one clock cycle.
- ❑ Memory response time for a Read operation is variable and usually longer than one clock cycle.
 - ◆ Processor waits until it receives an indication that the requested Read has been completed.
 - ◆ Control signal Memory Function Completed (MFC) is used for this purpose.
 - ◆ MFC is set to 1 by the memory to indicate that the contents of the specified location have been read and are available on the data lines of the memory bus.



Fetching a word from memory (contd..)

MOVE (R1), R2

1. Load the contents of Register *R1* into *MAR*.
2. Start a *Read* operation on the *memory* bus.
3. Wait for *MFC* response from the memory.
4. Load *MDR* from the memory bus.
5. Load the contents of *MDR* into Register *R2*.

Steps can be performed separately, some may be combined.

1. Steps 1 and 2 can be combined.
 - Load *R1* to *MAR* and activate *Read* control signal simultaneously.
2. Steps 3 and 4 can be combined.
 - Activate control signal *MDR_{inE}* while waiting for response from the memory *MFC*.
3. Last step loads the contents of *MDR* into Register *R2*.

Hence, Memory *Read* operation takes 3 steps.



Fetching a word from memory (contd..)

MOVE (R1), R2: Memory operation takes 3 steps.

Step 1:

- Place R1 onto the internal processor bus.
- Load the contents of the bus into MAR.
- Activate the Read control signal.
- $R1_{out}$ MAR_{in} $Read$.

Step 2:

- Wait for MFC from the memory.
- Activate the control signal to load data from external bus to MDR.
- MDR_{inE} $WMFC$

Step 3:

- Place the contents of MDR onto the internal processor bus.
- Load the contents of the bus into Register R2.
- MDR_{out} $R2_{in}$



Storing a word into memory

MOVE R2, (R1): Memory operation takes 3 steps.

Step 1:

- Place *R1* onto the internal processor bus.
- Load the contents of the internal processor bus into *MAR*.
- *R1_{out}, MAR_{in}*

Step 2:

- Place *R2* onto the internal processor bus.
- Load the contents of the internal processor bus into *MDR*.
- Activate Write operation.
- *R2_{out}, MDR_{in}, Write*

Step 3:

- Place the contents of *MDR* into the external memory bus.
- Wait for the memory write operation to be completed *MFC*.
- *MDR_{outE}, WMFC*



Execution of a complete instruction

Add the contents of a memory location pointed to by Register $R3$ to register $R1$.

ADD (R3), R1

To execute the instruction we must execute the following tasks:

1. Fetch the instruction.
2. Fetch the operand (contents of the memory location pointed to by $R3$.)
3. Perform the addition.
4. Load the result into $R1$.



Execution of a complete instruction

Task 1: Fetch the instruction

Recall that:

- PC holds the address of the memory location which has the next instruction to be executed.
- IR holds the instruction currently being executed.

Step 1

- Load the contents of PC to MAR.
- Activate the Read control signal.
- Increment the contents of the PC by 4.
- PC_{out} , MAR_{in} , Read, Select4, Add, Z_{in}

Step 2

- Update the contents of the PC.
- Copy the updated PC to Register Y (useful for Branch instructions).
- Activate the control signal to load data from external bus to MDR
- Wait for MFC from memory.
- Z_{out} , PC_{in} , Y_{in} , MDR_{inE} , WMFC

Step 3

- Place the contents of MDR onto the bus.
- Load the IR with the contents of the bus.
- MDR_{out} , IR_{in}



Execution of a complete instruction (contd..)

Task 2. Fetch the operand (contents of memory pointed to by $R3$.)

Task 3. Perform the addition.

Task 4. Load the result into $R1$.

Step 4: - Place the contents of Register $R3$ onto internal processor bus.

- Load the contents of the bus onto MAR .

- Activate the $Read$ control signal.

- $R3_{out}, MAR_{in}, Read$

Step 5: - Place the contents of $R1$ onto the bus.

- Load the contents of the bus into Register Y (Recall one operand in Y).

- Wait for MFC .

- $R1_{out}, Y_{in}, MDR_{in}, WMFC$

Step 6: - Load the contents of MDR onto the internal processor bus.

- Select Y , and perform the addition.

- Place the result in Z .

- $MDR_{out}, SelectY, Add, Z_{in}$

Step 7: - Place the contents of Register Z onto the internal processor bus.

- Place the contents of the bus into Register $R1$.

- $Z_{out}, R1_{in}$



Execution of a complete instruction (contd..)

<u>Step</u>	<u>Action</u>
<u>1</u>	<u>$PC_{out} \text{ , } MAR_{in} \text{ , } Read, Select4, Add, Z_{in}$</u>
<u>2</u>	<u>$Z_{out} \text{ , } PC_{in} \text{ , } Y_{in} \text{ , } WMF \ C$</u>
<u>3</u>	<u>$MDR_{out} \text{ , } IR_{in}$</u>
<u>4</u>	<u>$R3_{out} \text{ , } MAR_{in} \text{ , } Read$</u>
<u>5</u>	<u>$R1_{out} \text{ , } Y_{in} \text{ , } WMF \ C$</u>
<u>6</u>	<u>$MDR_{out} \text{ , } SelectY, Add, Z_{in}$</u>
<u>7</u>	<u>$Z_{out} \text{ , } R1_{in} \text{ , } End$</u>



Branch instructions

- ❑ Recall that the updated contents of the *PC* are copied into Register *Y* in Step 2.
 - ◆ Not necessary for *ADD* instruction, but useful in *BRANCH* instructions.:
 - ◆ Branch target address is computed by adding the updated contents of the *PC* to an offset.
- ❑ Copying the updated contents of the *PC* to Register *Y* speeds up the execution of *BRANCH* instruction.
- ❑ Since the Fetch cycle is the same for all instructions, this step is performed for all instructions.
 - ◆ Since Register *Y* is not used for any other purpose at that time it does not have any impact on the execution of the instruction.



Unconditional Branch instructions

Step	Action
1	PC_{out} , MAR_{in} , Read, Select4, Add, Z_{in}
2	Z_{out} , PC_{in} , Y_{in} , WMFC
3	MDR_{out} , IR_{in}
4	Offset-field-of- IR_{out} , Add, Z_{in}
5	Z_{out} , PC_{in} , End

Figure 7.7 Control sequence for an unconditional Branch instruction.



Conditional Branch instructions

Consider now a conditional branch. In this case, we need to check the status of the condition codes before loading a new value into the PC. For example, for a Branch-on-negative (Branch<0) instruction, step 4 in Figure 7.7 is replaced with

Offset-field-of- IR_{out} , Add, Z_{in} , If $N = 0$ then End

Thus, if $N=0$ the processor returns to step 1 immediately after step 4. If $N=1$, step 5 is performed to load a new value into the PC, thus performing the branch operation.